



**BT Socket to RJ11 Adapter**  
(to be used to connect UK analogue handsets to the router)




**Spitfire Managed Router**  
(models may vary)




**Green ATA (Analogue Telephone Adapter) ports: use Port 1**

**Please note:**  
The RJ11 (6-pin) and RJ10 (4-pin) may look similar but they are different and are not interchangeable. Cables with RJ10 plugs are not suitable for use in this setup.

**Please note:**  
Only Port 1 is configured with the IP Voice service and it receives an RJ11 (6-pin) plug.

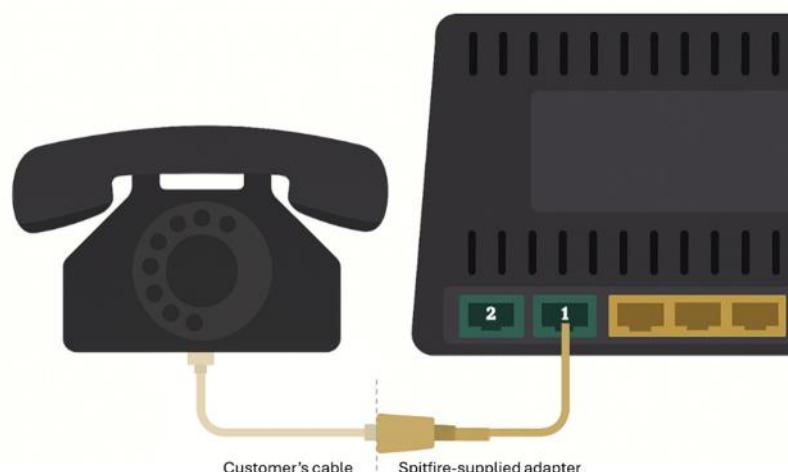

**The adaptor is only required where your analogue device has a BT plug:**

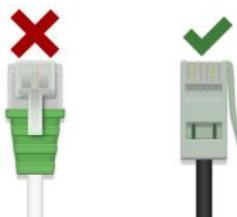

This advice covers connecting *your analogue telephone to the router*.  
For advice on *connecting-up the router*, refer to DSL Information Sheet or FTTB Information Sheet at  
<https://www.spitfire.co.uk/about/knowledge-base/>

**Spitfire Support**  
Tel: 020 7501 3030  
Email: [support@spitfire.co.uk](mailto:support@spitfire.co.uk)