










3CX YEALINK T26 – QUICK START GUIDE

Making a call

- Enter the internal extension or full external telephone number and then pick up the receiver to send the call.
- Alternatively, pick up the handset and then enter the internal extension or full external telephone number. Press the **Send** soft key or  button to dial out.
- To end the call, hang up the handset or press the **Cancel** soft key.
- To redial a number press  to enter the Placed calls list. Press  or  to find the desired entry, and then press  or the **Send** soft key. Press  twice when phone is idle to call the last dialled number.




Transferring calls

Supervised Transfer

- Place the caller on hold by pressing  or the **Tran** soft key.
- Dial the extension or the telephone number that you wish to transfer the call to, then press **Send** or .
- When the person picks up the phone, announce the caller then press  to connect the call.
- If you wish to come back to your caller on hold without transferring them, press **Resume** soft key.

(Please note, call charges apply to calls transferred externally)

 
Unsupervised Transfer

- Place the caller on hold by pressing  or the **Tran** soft key.
- Dial the extension or the telephone number that you wish to transfer the call to, then press **Send** or .
- Press  or **Tran** soft key to complete transfer.


(Please note, call charges apply to calls transferred externally)

Call Pick-Up


To pick up any phone when ringing

- Dial *20* and then press **Send** or . Alternatively, press the Pickup button from DSS keys (if configured).
- Lift handset and talk.




To pick up a certain phone when ringing

- Dial *20* and then the extension number followed by **Send** or .
- Lift handset and talk.








Setting up personal Voicemail

- Press  or dial 5555 then press **Send** or .
- To record your outgoing message, choose option 8 from the main menu and follow the prompts.

Listening to Voicemail messages

- Press  or dial 5555 then press **Send** or .
- New messages will automatically be played, and the  key LED will be lit.
- To listen to old messages, press *.
- During playback you can press 9 for advanced voicemail options

Call Forwarding (All calls)

- Press the **Menu** soft key when phone is idle and select **Features** then **Call Forward**.
- Change **Always Forward** to **Enabled** using  then press  and enter the number you want to forward to. Press **Save** soft key to confirm.
- To cancel, press the  button or go to **Menu** then **Features** and **Call Forward**. Use  or  to select the forwarding type and then use  or  to select **Disabled**.

Further options are available for busy/On timeout from; Menu -> Features -> Call Forward.

If you have any handset queries, you can contact Spitfire Support on:

020 7501 3030

support@spitfire.co.uk